FROGWEAR® SAFETY WEAR



Safety Vest Sizing Chart

Choosing the correct size in safety apparel is crucial for optimal protection and performance.

For an accurate size and fit in Global Glove safety vests, please refer to the following general sizing dimensions.



Body Length

BODY LENGTH	ACROSS CHEST	SLEEVE LENGTH (CLASS 3 VESTS ONLY)
26.5	23.25	11.5
26	24.75	11.75
26	25	12.25
27.25	26.5	12.5
27.5	28	13
28	30	13.5
28.75	30.75	13.75
29.5	31.5	14.25
30.25	32.25	14.5
31.5	33.25	15
31.5	34.25	15.25
	26.5 26 27.25 27.5 28 28.75 29.5 30.25 31.5	BODY LENGTH CHEST 26.5 23.25 26 24.75 26 25 27.25 26.5 27.5 28 28 30 28.75 30.75 29.5 31.5 30.25 32.25 31.5 33.25

SIZE	BODY LENGTH	ACROSS CHEST	SLEEVE LENGTH (CLASS 3 VESTS ONLY)
S/M	26	25.25	12.25
L/XL	28	28	13
2XL/3XL	28.75	30.75	13.75
4XL/5XL	30.25	32.25	14.5
6XL/7XL	31.5	33	15.25

ALL MEASUREMENTS IN INCHES

Estimate size to the closest fit. Body proportions may vary.



